


ES-Series Reader Interface Configuration

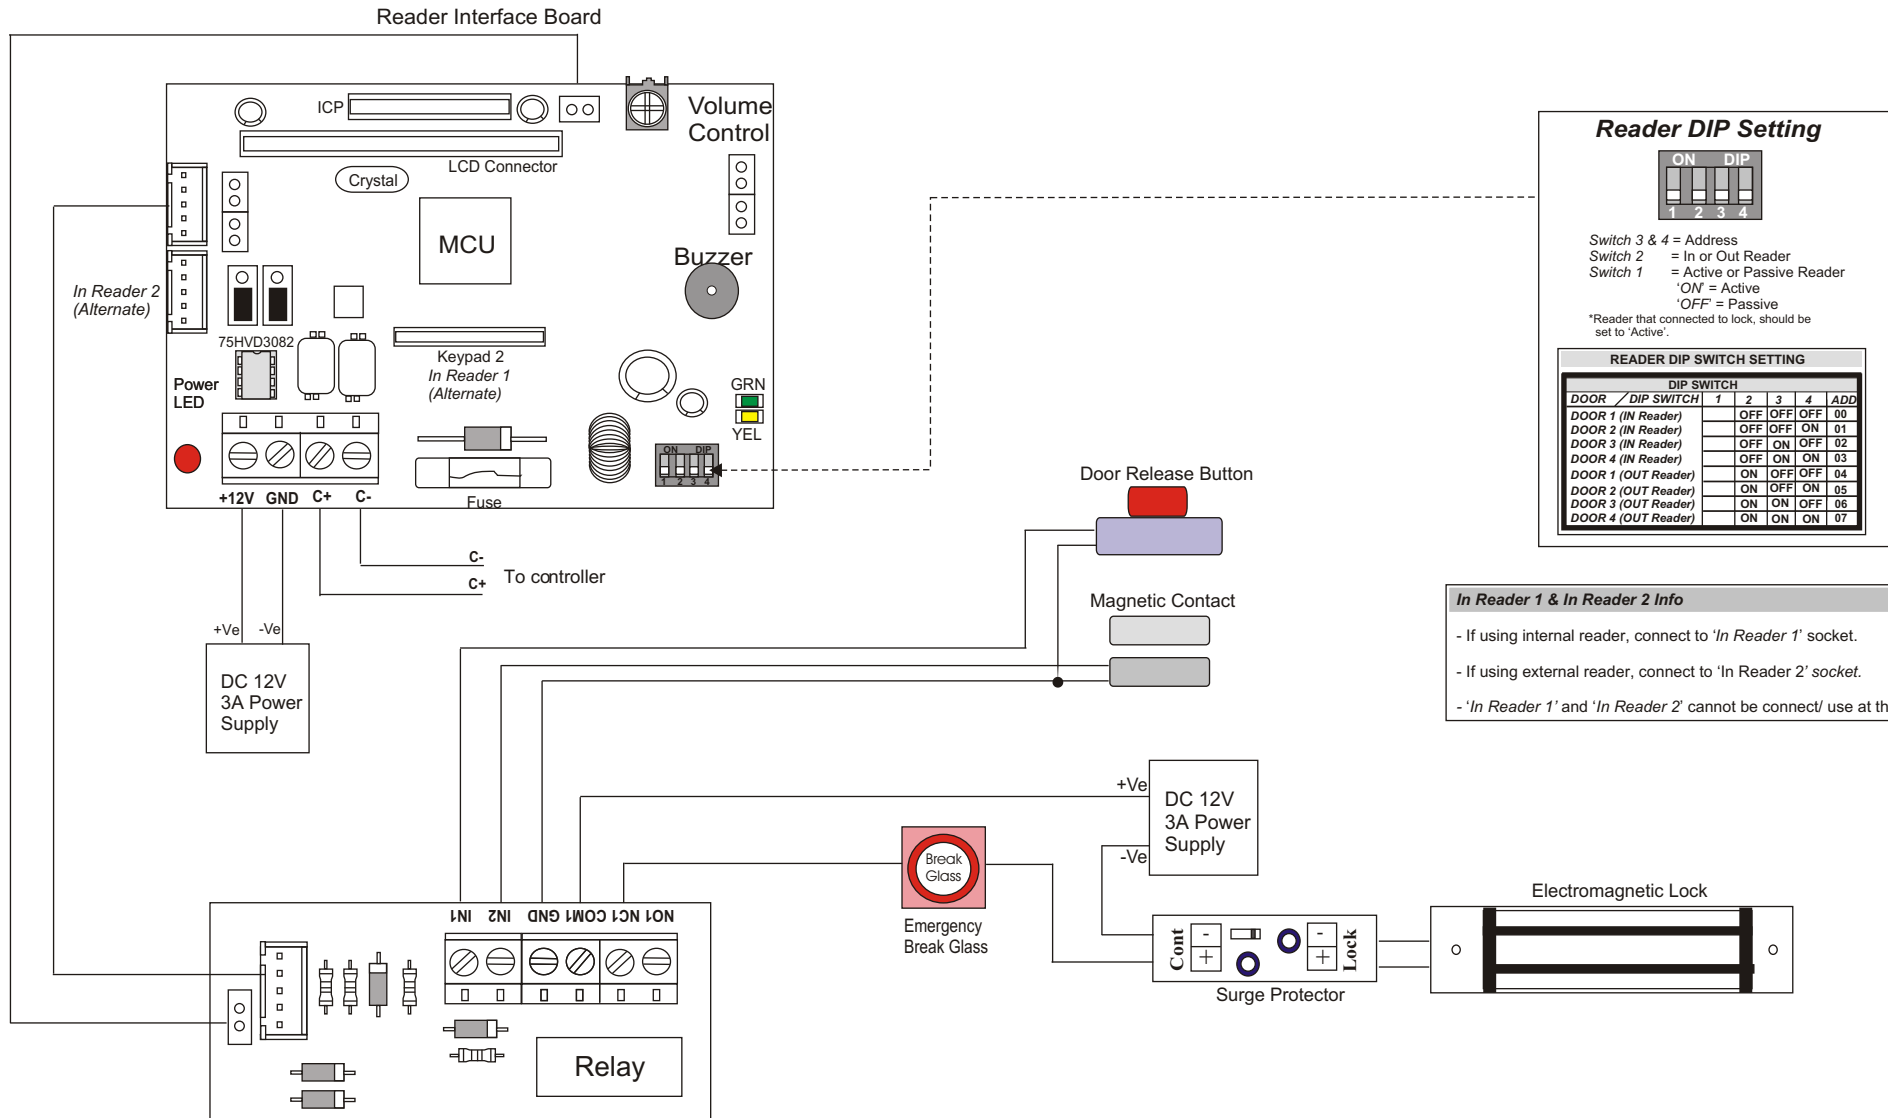

Remarks:

- All communication cable must be compliance to Rs485 standard, with proper grounding & connected in multidrop connection.
- If input point 'I/N2' not in use, connect 'I/N2' to 'GND'

*All specification subject to change without prior notice.