


# iCASS Reader Interface Configuration

## For Wiegand 26bits reader

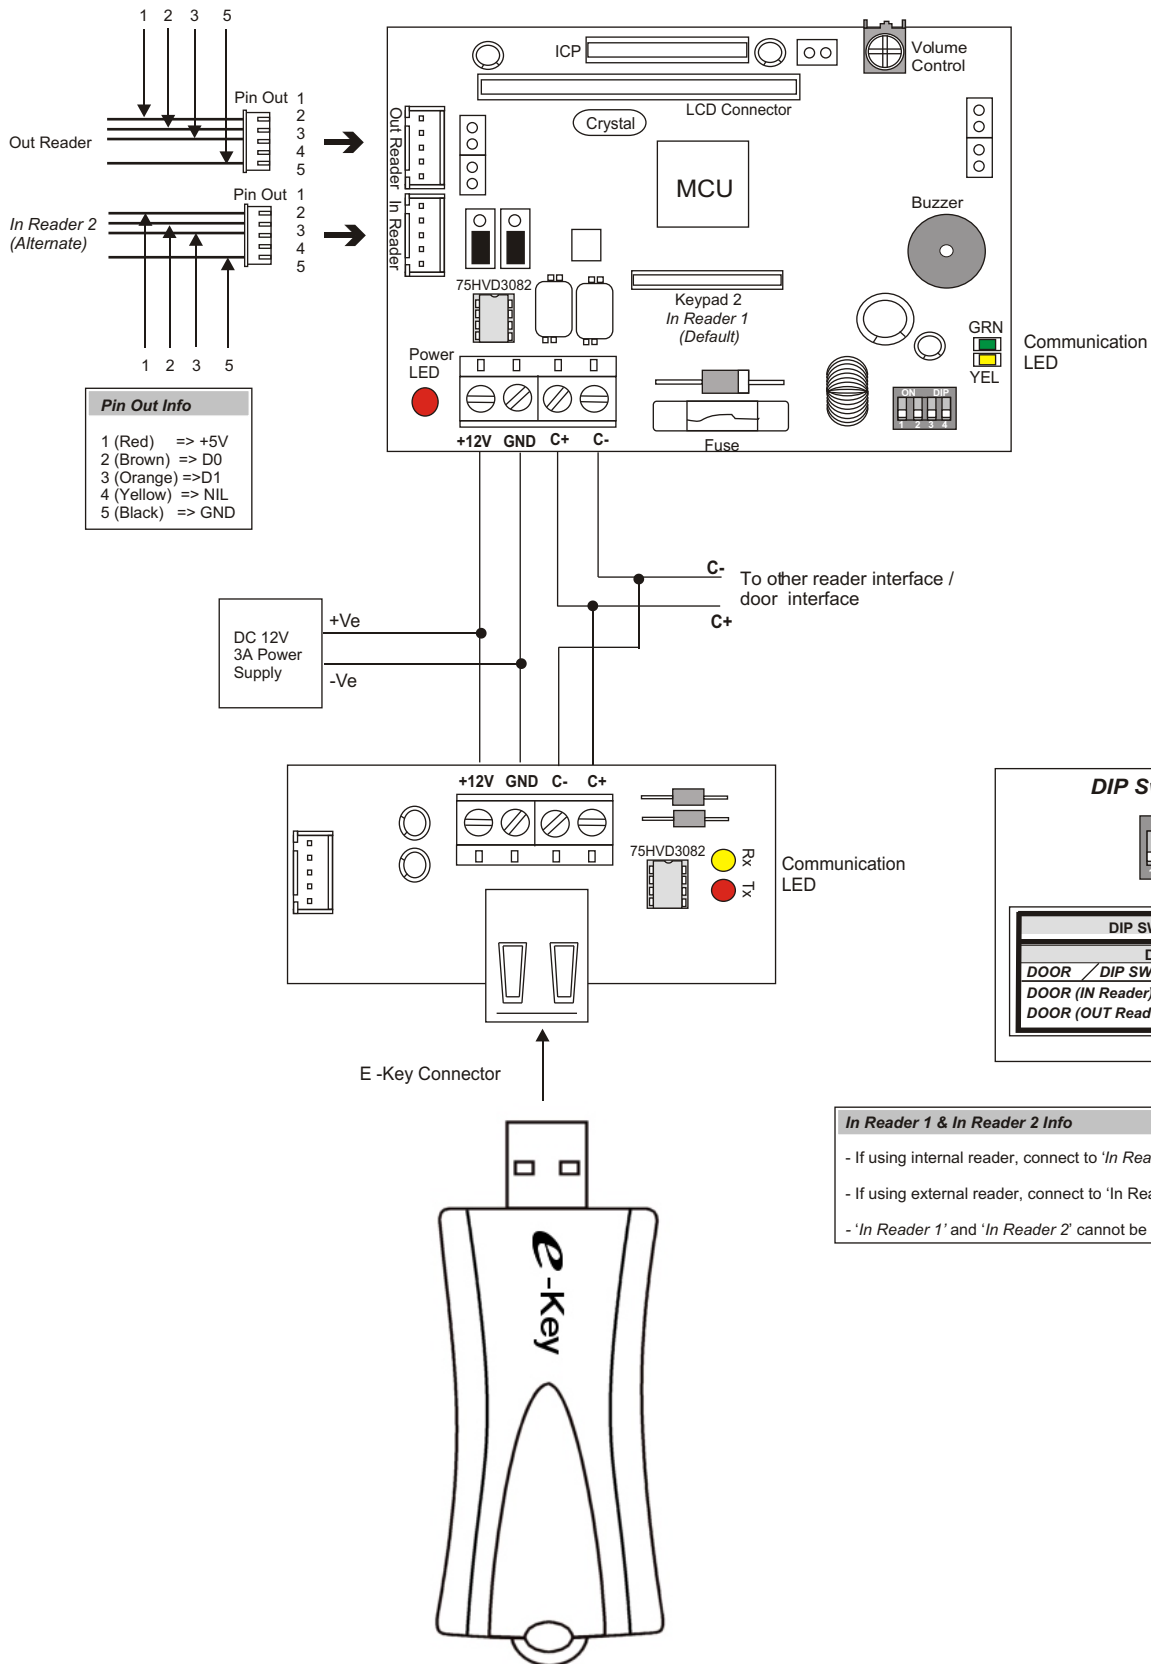

### Remarks:

- All communication cable must be compliance to RS485 standard, with proper grounding & connected in multidrop connection.

\*All specification subject to change without prior notice.

File	iCASS RDR INT_W26v1.2
Date	200705
Company	Cass Technology Sdn Bhd