

MC-8(Y) MOTORCYCLE ALARM SYSTEM.

Operating instructions

 
MC8(Y) Features.

- *FOUR BUTTON EXTENDED RANGE R/F REMOTE CONTROL.
- *10 SECOND SIREN DURATION WHENEVER TRIGGERED.
- *ALERT PAGER OUTPIJT RESERVED (OPTION)
- *ARMED / DISARM CHIRP(S) CONFIRMATION
- *BIKE SEARCHING.
- *BUELT-,IN EEPROM TO PREVENT CODES FROM LOST.
- *ENGINE DISABLE*
- *FACTORY PRE-CODED TRANSMITTERL.
- *FALSE ALARM FREE PIEZZO BLADE SENSOR.
- *HIGH POWER, SINGLE TONE SIREN
- *INSTANT TAMPERED TRIGGER
- *LOW VOLTAGE DETECTOR (LVD)"RESET" CIRCUIT.
- *MULTI-FUNCTION R.F. REMOTE TRANSMITTER
- *PROTECTION ADDED ON ALL INPUTS & OUTPUTS.
- *REMOTE SIREN MUTED, IF TRIGGERED, TO PREVENT NUISANCE.
- *REMOTELY ADJUSTABLE 8 STAGE SHOCK SENSOR.
- *SILENT ARMING/ FLASHES CONFIRMATION MODE, + STATE OF THE ART ELECTRONIC MICROPROCESSOR. +

** Ask your dealer for option availability

Each button function assignment of the remote control transmitter.

MODE	KEY	CHIRP(S)	LIGHT
ARM	1 ST	1	1
DISARM	2 ND	2	1
SILENT ARM	3 RD	0	1
REMODE ENGINE START	4 TH	1	1
REMODE SENSITIVITY SENTTING(8 stages)			
Under disarm mode	1 st +2 nd	2	0
Decrease sensitivity	1 st	1	1
Increase sensitivity.	2 nd	1	1
Sensitivity settling completed			
After reach ideal stage, Wait for 3 seconds		2	1
TRANSMITTER LOCK.(Under armed mode)	1 st +3 rd	3	
Deactivate transmitter lock(repeat above procedures)	1 st +3 rd	3	

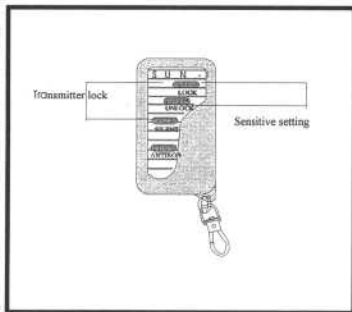

I. Arming. (Press 1st key)

Turn off engine, depress button #1 for 1/4 second. One chirp will be heard from siren, light flashes once, to confirm entering arming mode. Once the alarm has armed, the engine will be disabled to prevent starting of engine.

Bike searching: Press 1st button while armed mode will activate siren to help locating your bike.

Siren muted: While siren activating under Armed Mode, press 1st button again to deactivate it, but it won't effect Arm Mode.

II. DISARMING THE ALARM SYSTEM Depress button #1 on transmitter for 1/2 a second .Siren Will emit two chirps and marker lights will pulsate twice. Alarm system is now disarmed

III.Silent arming: Press 3rd button, light flashes once to confirm entering silent Arming mode. This function is especially recommended for the system equipped with Alert Pager. Under this Mode, any tampered, or trespass will activate signal directly to the pager.

Note: If the bike's ignition switch is being forced open, it will trigger both Pager & siren simultaneously.

IV. Remote Engine Start. Press 4th button, light flashes once & one chirp will be heard, to remote start the engine.

To get more starter cranking time, just keep on press the 4th button until engine start successfully.

The longer you press the button, the more cranking time you are going to get.