

**REMOTE SETTING SENSITIVITY.

Must be under disarm mode, press 1 & 2 buttons together, 2 chirps will be heard to confirm entering remote sensitivity setting mode, To increase sensitivity, press 1st button and to decrease sensitivity, press 2nd button. There are 5 stages factory setting sensitivity. Chirp(s) Will be heard to let you identify which stage you are at. For example: if in 2nd stage, then two chirps will be heard. After reach to ideal stage, press, leave there and wait for 3 seconds, 3 chirps will be heard to confirm the setting is completed.

Transmitter lock.

Must be under armed mode to activate this function. Press 1st & 3rd button simultaneously, 3 chirps will be heard to confirm enter this mode. To deactivate this function just repeat above procedures. This is to prevent the transmitter from lost and any unauthorized use.

HUGE TECHNOLOGY CO., LTD. MC-8(Y) MOTORCYCLE ALARM INSTALLATION DIAGRAM.

POSITIVE STARTER: CONNECTS RED/ WHITE ONLY.
NEGATIVE STARTER: CONNRCTS BACK/ WHITE ONLY.

NOTE: IF THE BIKE IS NEGATIVE ENGINE CUTOFF, CONNECTS NO.1 TO GROUND
IF THE BIKE IS FLOATING-POINT ENGINE CUTOFF, CONNECTS NO.2 TO GROUND (-)

