


# System Controller Keyboard

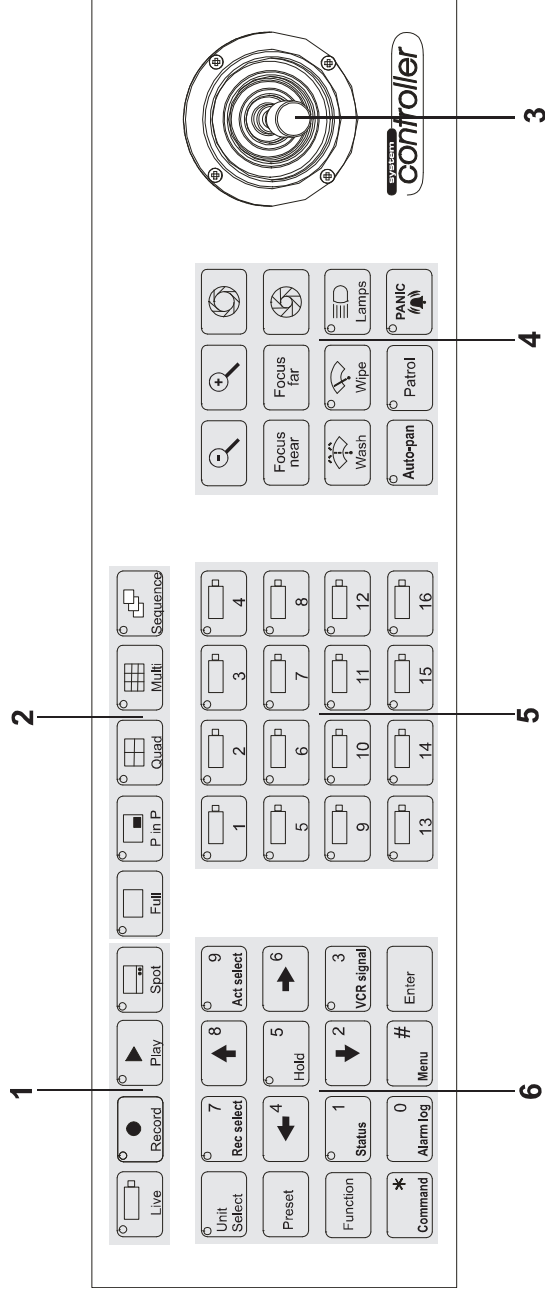

1. **Mode keys** - The Mode keys are used to switch to the desired operating mode. The mode of operation is indicated by the LED on each button. The spot key is used in conjunction with the chosen operating mode to control the spot monitor.
2. **Main Monitor Display keys** - The monitor view keys are used to alter the main monitor display.
3. **Telemetry Joystick** - The telemetry joystick allows precise control of single and multispeed telemetry cameras.
4. **Telemetry keys** - The telemetry keys are used to control telemetry functions.
5. **Camera keys** - The camera keys select the desired camera on the monitor. The LED indicates the selected camera, a flashing indicator shows a fault condition.
6. **System keys** - The system keys are used to control advanced features of the System Sprite.