

HAND HELD METAL DETECTOR

ESH-10

OPERATING MANUAL

First Time Operation

TO Operate the detector


- 1) Install the Batteries
 - a. Use a 9-Volt ALKALINE or Ni-Cd battery
 - b. Install battery with correct polarity (align "+" on detector housing with "+" on battery)
 - c. The battery cover opens and closes with a screwdriver
- 2) Set the Sound / Vibrate switch to "sound" and "Vibrate"
 - a. Forward position (S) : Sound ON
 - b. Center position (O) : Power OFF
 - c. Back position (V) : Vibrate ON
- 3) Sweep the Detector over the target area.
Detector must be IN MOTION to detect metal
- 4) Read this manual for proper training in the detection metal objects



- ← Battery
- ← Alarm
- ← Power

Batteries

- Use 9-Volt ALKALINE or NI-Cd battery
- Low Battery Alert
 - The RED LED indicator light will illuminate and remain illuminated when the batteries are discharged to the point at which the detector has lost 10% of its metal detecting range.
 - The sound alert will also lengthen (the tone will sound for a longer period of time) upon detection of metal objects, when the batteries become discharged to the point at which the detector has lost 10% of its metal detecting range.
 - The detector will continue to operate, at a lower sensitivity, when the Low Battery Indicators are activated. Replace batteries as soon as possible after these indicators activate.

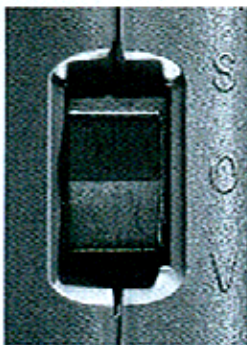

- ← Sound
- ← Power OFF
- ← Vibrate

LED Indicators

- The RED light indicates LOW BATTERY
- The YELLOW light indicates the detection of a metal object
- The GREEN light indicates that the detector is ON

Charger Jack