



# SECURITEX MANDOWN SYSTEM PARTS

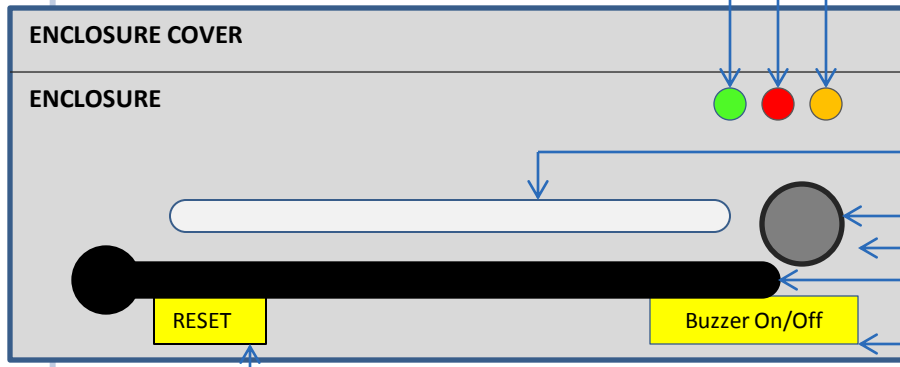

5VDC 2500mA for Charging MD18 Man down Transmitter

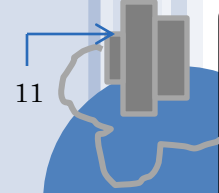

- SECURITEX**  
**MOBILE GSM LONE WORKER SYSTEM**
1. Operation Light (Green & Blinking when in Standby mode-System in operation)  
(Green & Stay ON-man down activated)  
(NO Light System is OFF)
  2. Battery Low (Red & Blinking mean the internal battery low)
  3. Full Charge (Orange & Stay ON- Battery FULL Charge)
  4. Carry Handle (Carry handle also us as Antenna and charging input Protector)
  5. Input (Internal battery charging input)  
(RS232-RS485 programming port)
  6. Casing (Water resistant enclosure)
  7. Antenna (Man down Omni directional antenna)
  8. Buzzer (Magnetic sensor in place buzzer ON when Man Down activated)  
(Magnetic sensor remove buzzer OFF)
  - 9-10. RESET (Man Down Activated RESET using the Magnetic Sensor)
  11. Input Cap (CAP to prevent moisture when use outdoor)

RESET

