


## MD-18 FULL ACTIVATION CONDITION

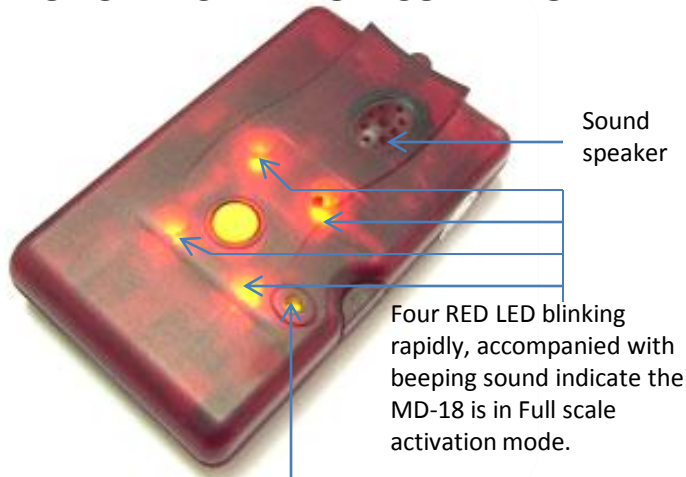


Yellow LED Stay indicates the MD-18 is in Tilt or Tilt & No-Motion Detection mode

**If Yellow LED Turn RED the MD-18 is LOW battery Do Not Used. Put the MD-18 On Charge.**

## MD-18 in Normal Mode

**\*\* MD: is also known as Man Down and can also be Call as Lone Worker Transmitter**

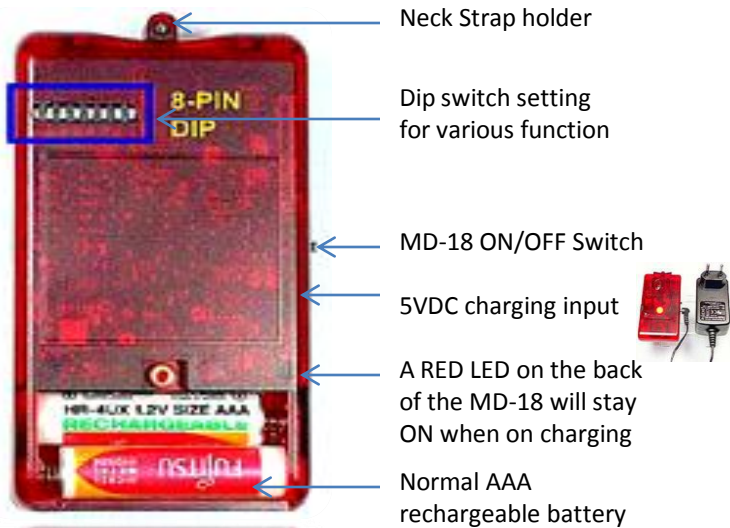

## BACK OF THE MD-18



## MD-18 see through carrying pouch with belt strap