iCASS Reader Interface Configuration

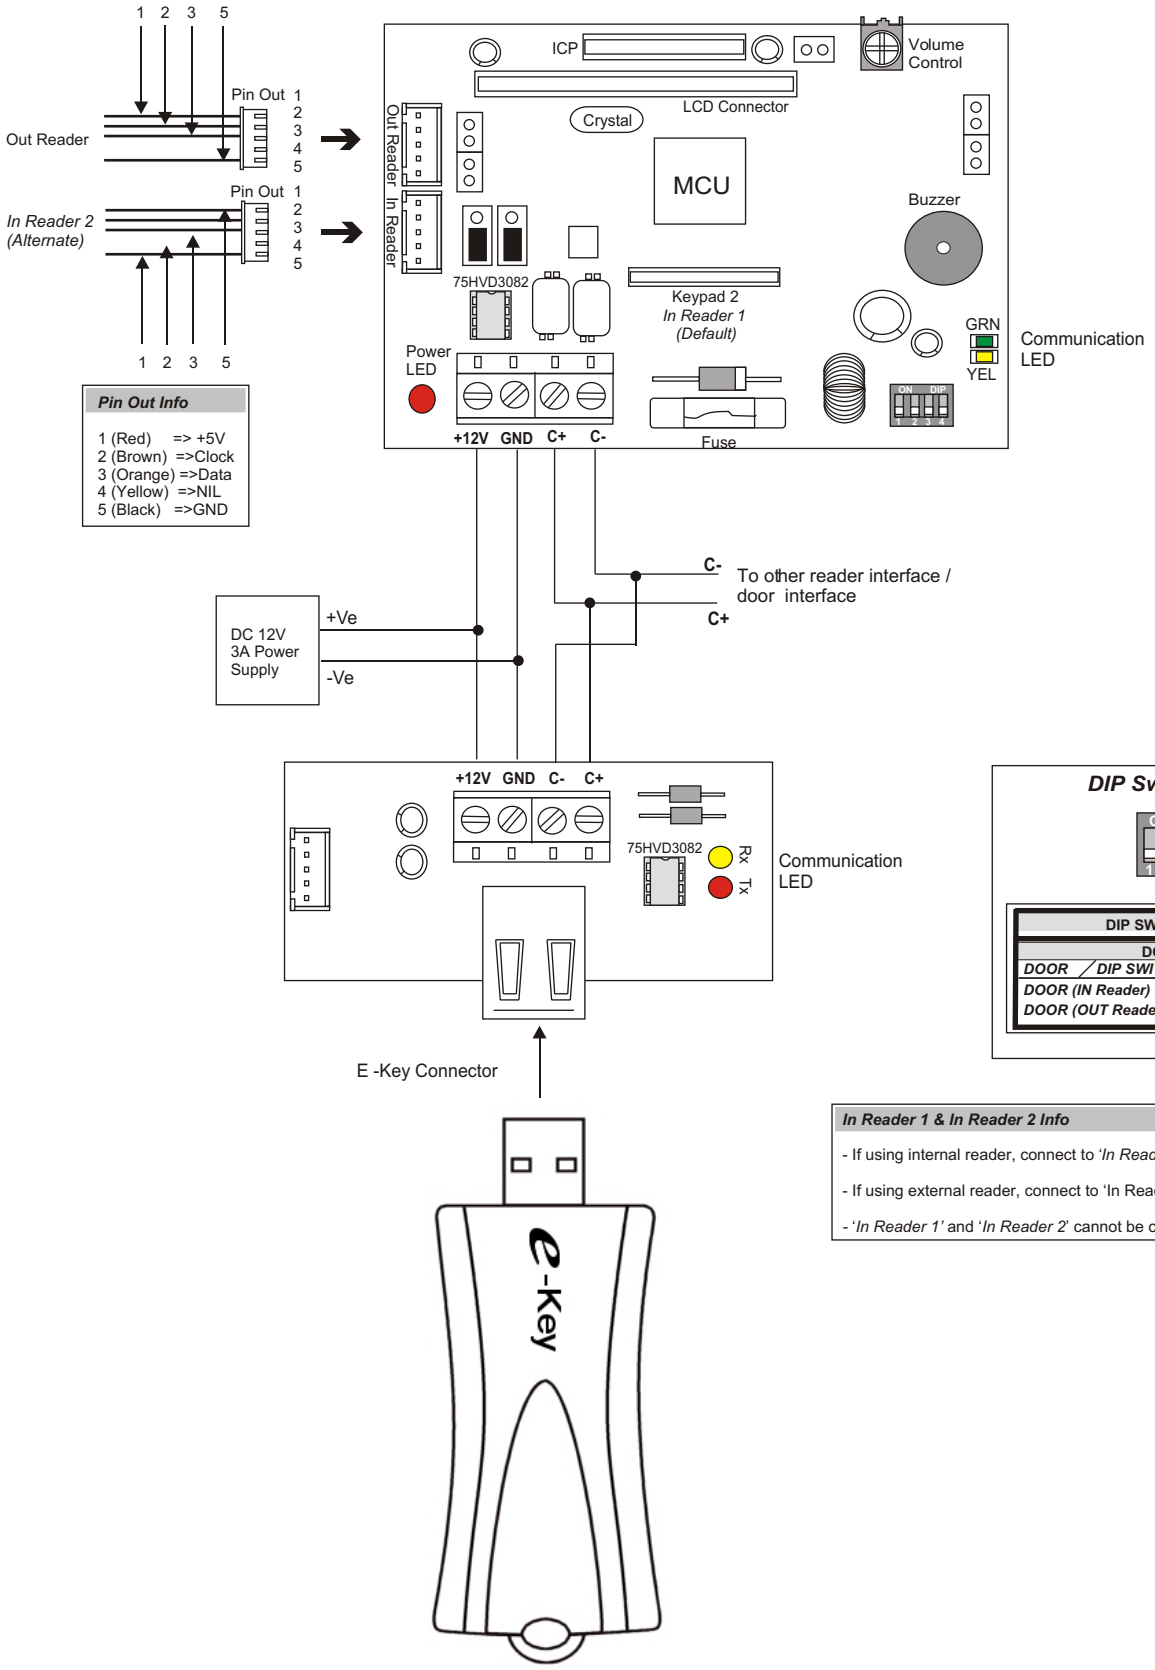

DIP SwitchSetting



DIP SWITCH SETTING				
DOWNLINK 1				
DOOR / DIP SWITCH	*1*	*2*	*3*	*4*
DOOR (IN Reader)	OFF	OFF	OFF	OFF
DOOR (OUT Reader)	OFF	OFF	OFF	ON

In Reader 1 & In Reader 2 Info

- If using internal reader, connect to '*In Reader 1*' socket.
- If using external reader, connect to 'In Reader 2' socket.
- '*In Reader 1*' and '*In Reader 2*' cannot be connect/ use at the same time.

Remarks:

- All communication cable must be compliance to RS485 standard, with proper grounding & connected in multidrop connection.

File	iCASS RDR INTv1.2
Date	200509
Company	*Cass Technology Sdn Bhd*

*All specification subject to change without prior notice.