

S-Series Reader Interface Programming (Standalone/ Emergency Mode)

1.READER COLD START

- Switch OFF the Power
- Press '*' and '7' together & hold
- Switch ON the Power
- Release button after long beep sound

5.INSTALL CARD

- Press * Button
 - Key in Master PIN
 - Press 03
 - Key in the first card no
 - Key in 2 digits numbers of card to be installed -- In Sequence
- * Each batch card only can add until 99.
Exp::Add card 000001~000150
step: I) 000001 - 99
II) 000100 - 50

2.MASTER PIN

To enter the Programming mode, user has to key in 6 digits of the Master PIN (Default as 310398),and follows by the following steps.

6.DELETE CARD

- Press * Button
- Key in Master PIN
- Press 04
- Key in card number that wanted to be deleted

3.SET CARD + PIN MODE

- Press * Button
- Key in Master PIN
- Press 01
- Press 1 to ON or 0 to OFF

4.SET DOOR PIN MODE

- Press * Button
- Key in Master PIN
- Press 02
- Press 1 to ON or 0 to OFF

8.SET LOCK OUT ON/OFF

- Press * Button
- Key in Master PIN
- Press 06
- Press 1 to ON or 0 to OFF

9.LOCK RELEASE TIME

- Press * Button
- Key in Master PIN
- Press 08
- Key in Period of time (00-15sec)

10.DOOR OPEN TIME

- Press * Button
- Key in Master PIN
- Press 09
- Key in period of time (00-30sec)

13.CHANGE MASTER PIN

- Press * Button
- Key in Master PIN
- Press 12
- Key in new Master PIN in 6 digits

14.CHANGE CARD PIN

- Press * Button 3 times
- Swipe the user card.
- Key in old PIN number
- Key in new PIN number
- Repeat step iv again for verification

11.SECURITY ON/OFF

- Press * Button
- Key in Master PIN
- Press 10
- Press 1 to ON or 0 to OFF

15.SET DOOR PIN 1


- Press * Button
- Key in Master PIN
- Press 18
- Key in PIN number 4 digits, (0000 Disable) (Set PIN number first before PIN mode)

12.SET FACILITY CODE

- Press * Button
- Key in Master PIN
- Press 11
- Key in the facility code (0000 Disable)

16.SET DOOR PIN 2

- Press * Button
- Key in Master PIN
- Press 19
- Key in PIN number 4 digits, (0000 Disable) (Set PIN number first before PIN mode)

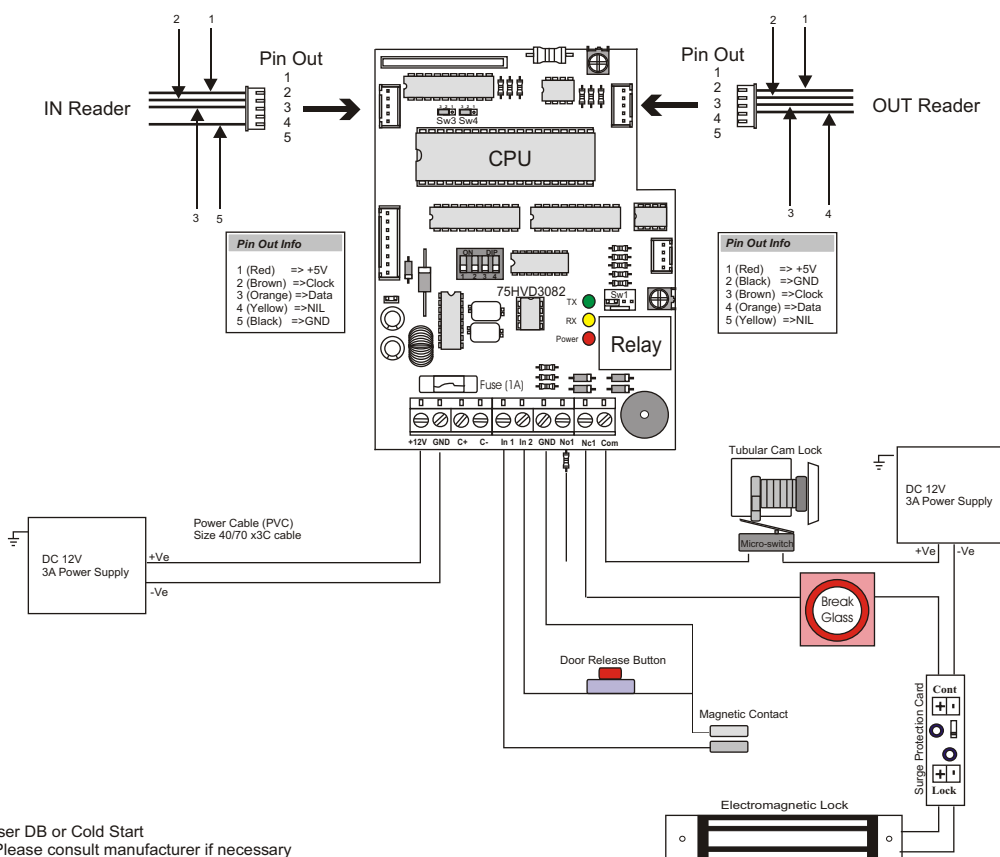

Remark:

- Please clear all User DB or Cold Start after installation. Please consult manufacturer if necessary
- 'Master PIN' For emergency mode, password will refer to the last controller setting.