

iCASS Controller Configuration

LED 8 and LED 9

Indicating the communication status between PCI and Controller.

LED 12 and LED 13 (Door 1 - Door 8)

Indicating the communication status between door interface and controller.

LED 14 and LED 15 (Door 9 - Door 16)

Indicating the communication status between door interface and controller.

LED 4 and LED 5 (Door 17 - Door 24)

Indicating the communication status between door interface and controller.

LED 6 and LED 7 (Door 25 - Door 32)

Indicating the communication status between door interface and controller.

(For normal operating condition- all LEDs will blinking)

CONTROLLER DIP SWITCH SETTING											
CTRL / DIP SWITCH	1	2	3	4	ADD	CTRL / DIP SWITCH	1	2	3	4	ADD
CONTROLLER 1	OFF	OFF	OFF	OFF	00	CONTROLLER 9	OFF	OFF	OFF	ON	08
CONTROLLER 2	ON	OFF	OFF	OFF	01	CONTROLLER 10	ON	OFF	OFF	ON	09
CONTROLLER 3	OFF	ON	OFF	OFF	02	CONTROLLER 11	OFF	ON	OFF	ON	10
CONTROLLER 4	ON	ON	OFF	OFF	03	CONTROLLER 12	ON	ON	OFF	ON	11
CONTROLLER 5	OFF	OFF	ON	OFF	04	CONTROLLER 13	OFF	OFF	ON	ON	12
CONTROLLER 6	ON	OFF	ON	OFF	05	CONTROLLER 14	ON	OFF	ON	ON	13
CONTROLLER 7	OFF	ON	ON	OFF	06	CONTROLLER 15	OFF	ON	ON	ON	14
CONTROLLER 8	ON	ON	ON	OFF	07	CONTROLLER 16	ON	ON	ON	ON	15

Figure 1 : Controller DIP switch setting

CONTROLLER OUTPUT & INPUT						
CONTROLLER	OUTPUT 1	OUTPUT 2	IN 1	IN 2	IN 3	IN 4
ICASS	General Purpose	Auxiliary	-	-	-	Fire Alarm

Figure 2: Output & Input

To +12Vdc source
To 0Vdc source (Gnd)
To +12Vdc source

To PCI

Door 1 - Door 8
Door 9 - Door 16
Door 17 - Door 24
Door 25 - Door 32



Output 2

Output 1

Input

Controller DIP

Controller DIP Setting

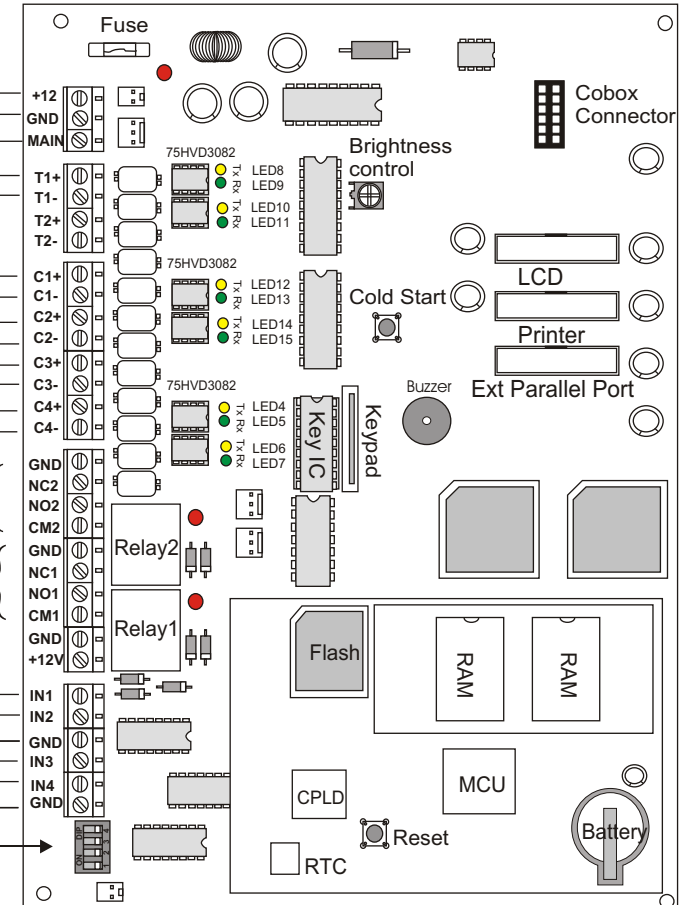

Remarks:

- After installation, please perform 'Cold Start' procedure. Please refer to controller manual for proper 'Cold Start' procedure.
- For single controller, DIP switch need to be set to address '00'.
- For multiple controller, please refer to figure 1 for address setting.
- Controller address should not be set the same to avoid data corruption.
- All input point must be ground with a 3.6K ohm resistor.
- All communication cable must be compliance to RS485 standard, with proper grounding & connected in multidrop connection.

File	iCASS CTRL v1.2
Date	200509
Company	Cass Technology Sdn Bhd